



Set Up Instructions

WLM-2000V


Step 1: Assemble straight poles by pressing and pushing together.

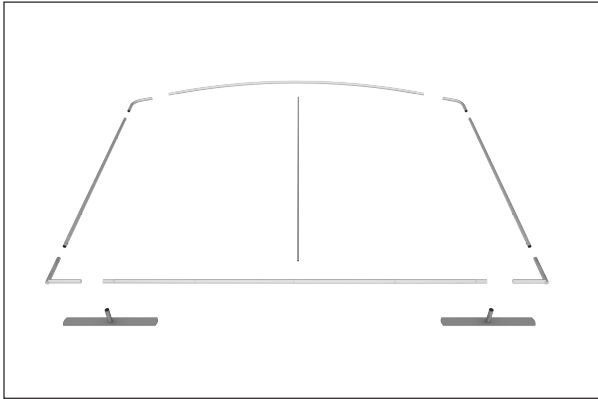


Step 2: Connect all corner sections to curved and straight sections of the frame by matching shape symbols on pipes.

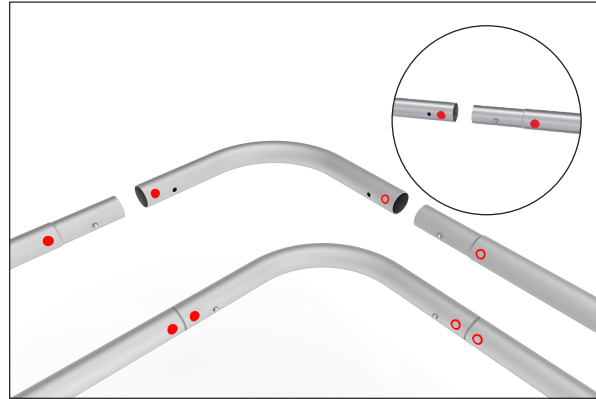


Step 3: Insert center support pole.

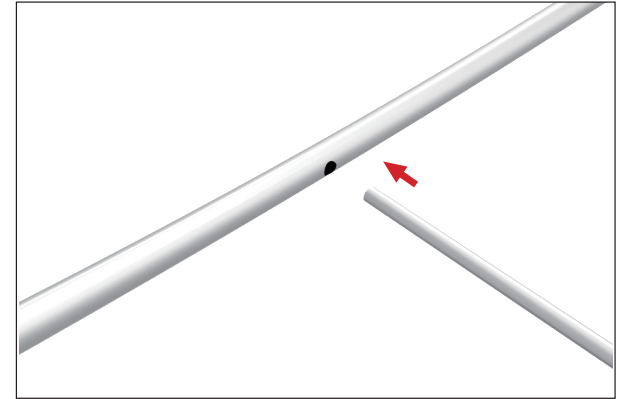

Step 4: Insert the feet that came with the display into the corners of base to complete assembled frame shown.

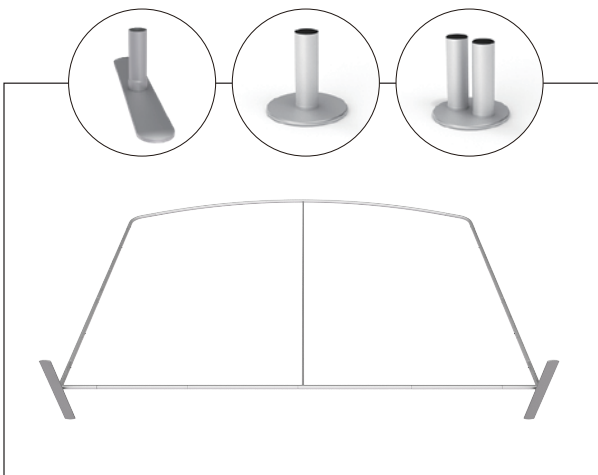


Step 5: Unzip print and lay image face up. Slide print onto frame like a pillow case. Pull and stretch the graphic below the bottom cross bar and zip closed under the cross bar.

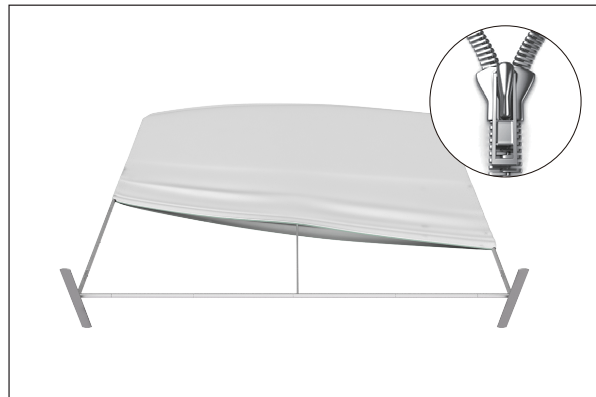


Set Up Instructions

MDSR-36089FS


Step 1: Assemble straight poles by pressing and pushing together.

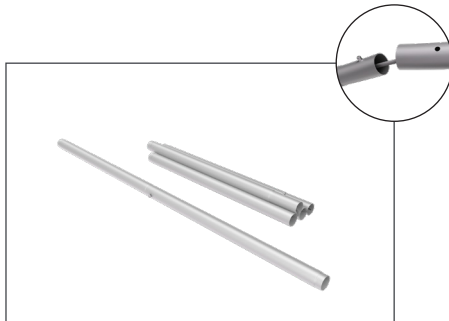


Step 2: Connect all corner sections to straight sections. Face holes of 90° corners towards the bottom of frame.

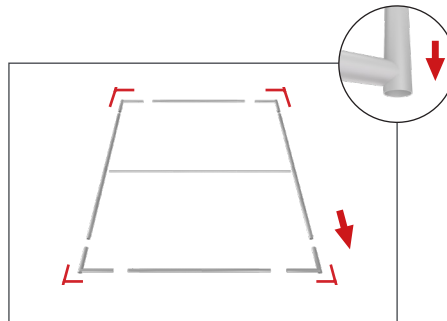


Step 3: Insert center support pole.

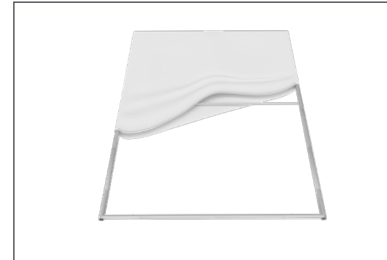


Step 4: Grip the fabric tightly and stretch around bottom pole to pinch zipper into place. Zip the graphic together for taut finish.

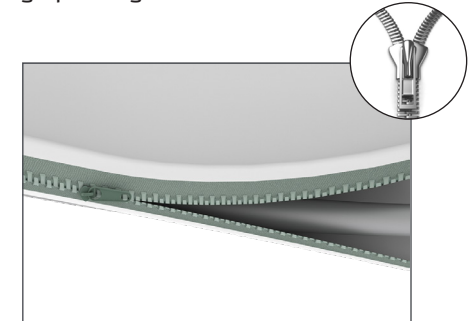



Step 5: Assemble post (75) into the 4 corners of the base plate with screw by hand turning post and tightening into place.

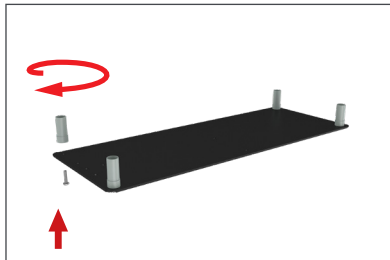

Step 6: Push banner stand frame onto back posts of flat base or optional feet. Press evenly on both sides to make easier for the frame to go on.

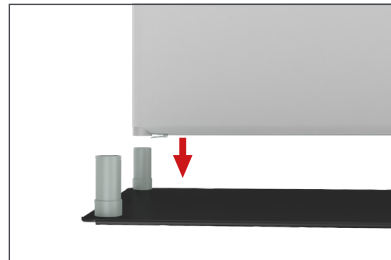

Step 7: Assemble x2 - (85) and (87) together and push poles into top of frame and front two posts (75).

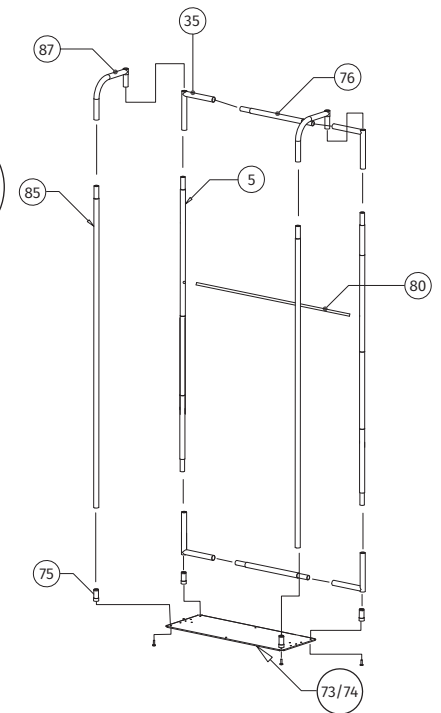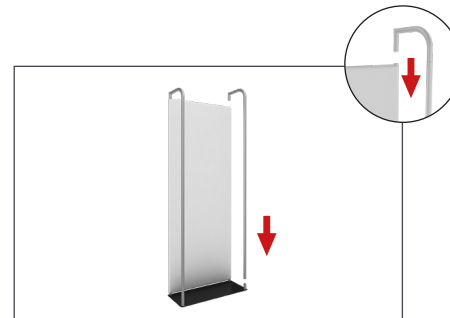


SHELVING & ACCESSORIES:
(OPTIONAL) To add shelves or accessories to frame, position and level part on frame before tightening clamps down with hex tool.




Set Up Instructions

CSNRC-100M


Step 1: Assemble all straight pipes with bungee cords by pushing and pulling together.

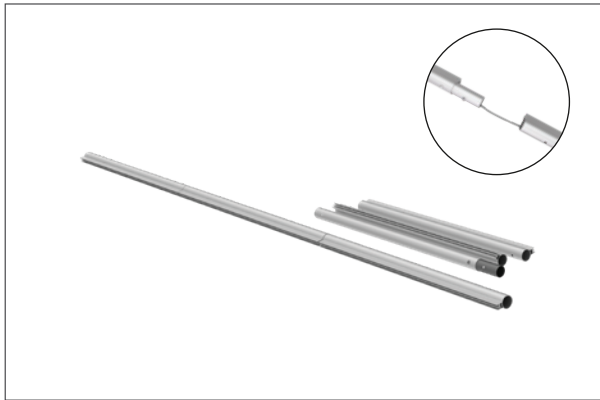


Step 2: Connect all corner sections to straight sections of the frame by matching color on pipes.

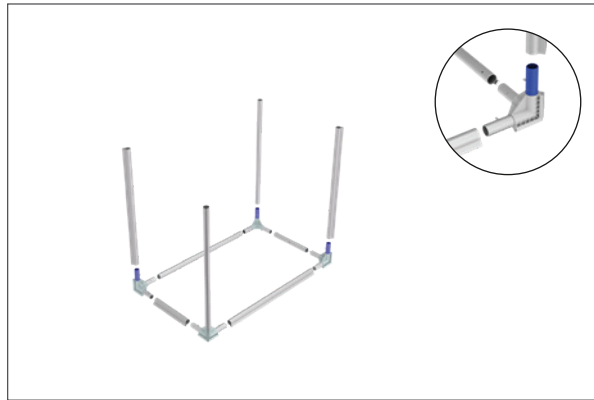



Step 3: Build two outer frames and connect top and bottom frames together in the corners with small connecting pipes.

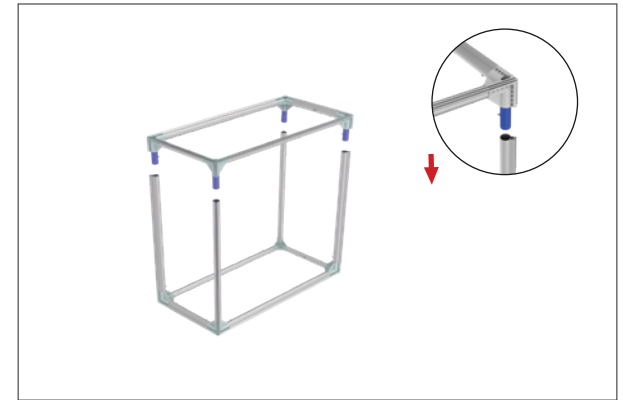

Step 4: At the top of the frame attach cable to left and right side. Tighten or loosen with hand pull.

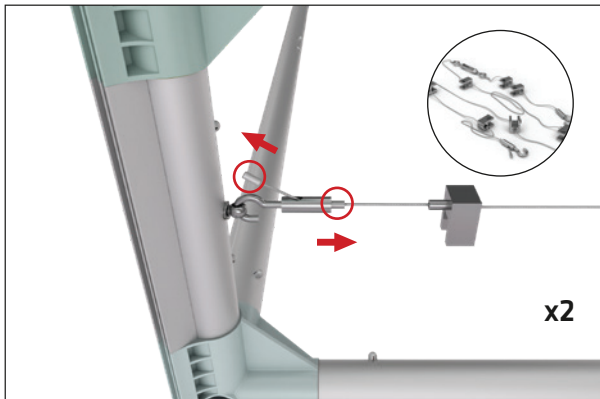


Step 5: Move to the center of cable and hand tighten remaining turn buckle to remove any remaining slack. Do not over tighten.

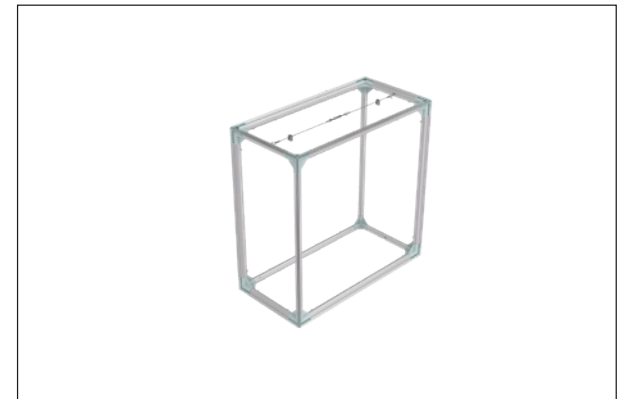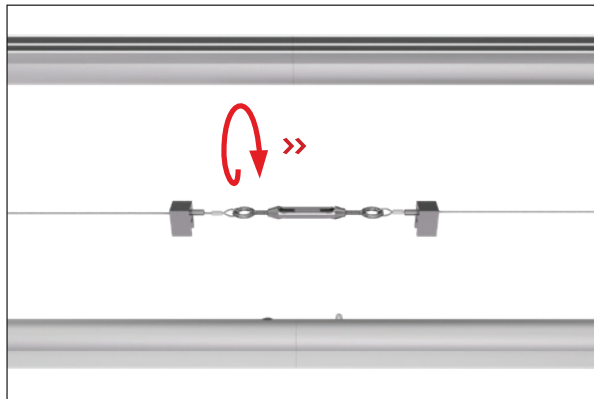

Set Up Instructions

CSNRC-100M


Step 6: Take out the LED Lights and hook the Light Array onto the wire harness clips at the top of frame

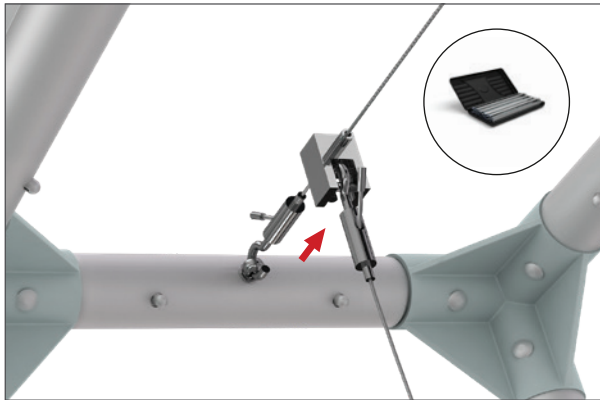

Repeat until all Light Arrays are attached. Lights Arrays do not attach to bottom of frame, but hang under their own weight in final upright position.



Step 7: Completed frame with Light Arrays attached.

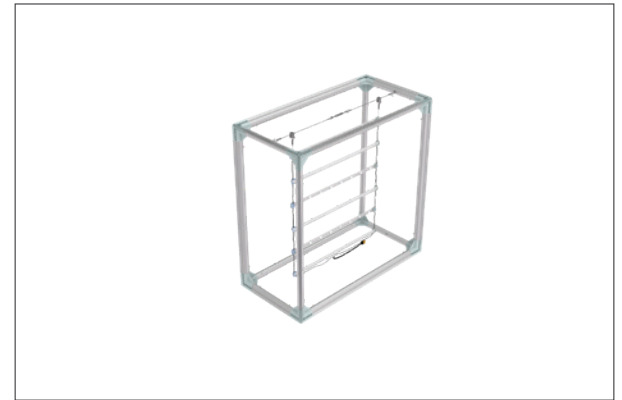

Step 8: Fit PVC inner boards onto the top of frame with wedge side face down. Position and align board until it fits down into the frame.



Step 9: Drape the graphic over frame and gently pull down to bottom of counter on all sides.



Step 10: To complete installation of graphic, gently place counter on its side.




Set Up Instructions

CSNRC-100M


Step 11: Start in one corner of the frame and push the silicone edge of graphic into the outside bottom groove. Insert for 4-6 inches in both directions. Repeat on all corners.




Step 12: Continue inserting silicone edge of graphic into the frame working towards the center of frame on each side. Do not over pull or stretch.

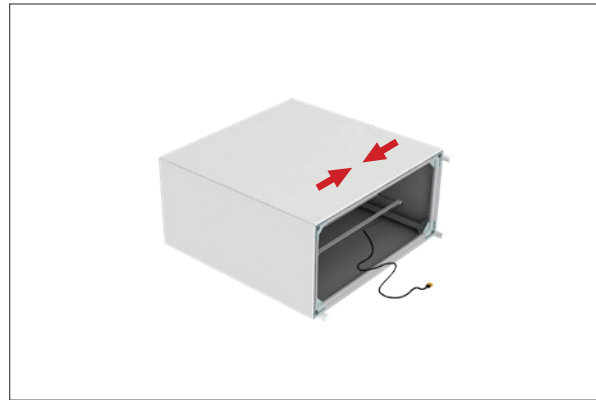

Step 13: Insert feet into 4 corners of the frame base.

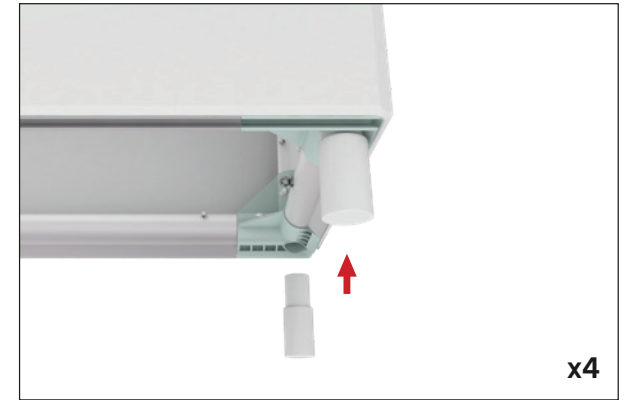

Step 14: Attach LED Light Array to power supply. Stand counter into upright position over top of power supply with power cord showing.

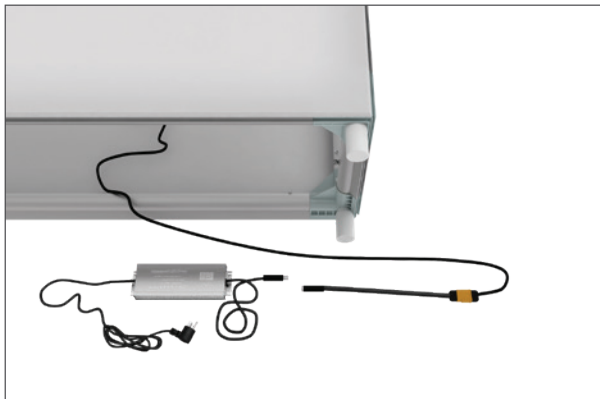

Step 15: Move counter into position and plug power cords into outlet to illuminate display.



CAUTION!

Do not connect lights to power when lights are rolled up. Hang lights on frame before connecting to power for testing.




Set Up Instructions


WLMST-H-L

Step 1: Assemble the 3-piece support pole using x4 connecting bars with x8 screws by inserting the bars into the grooves and pushing the poles together.


Note: Placement of the flat bars below.

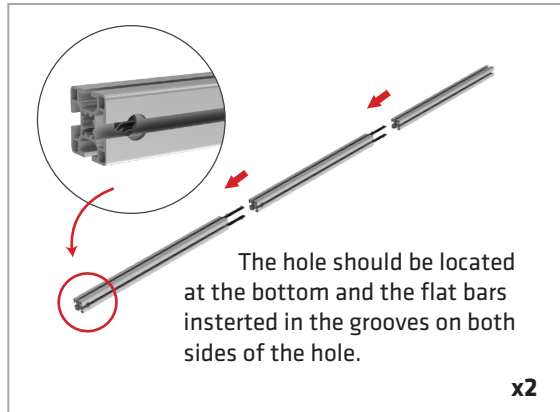


Step 2: Tighten the screws on the connector bars to secure the 3-piece support pole together.

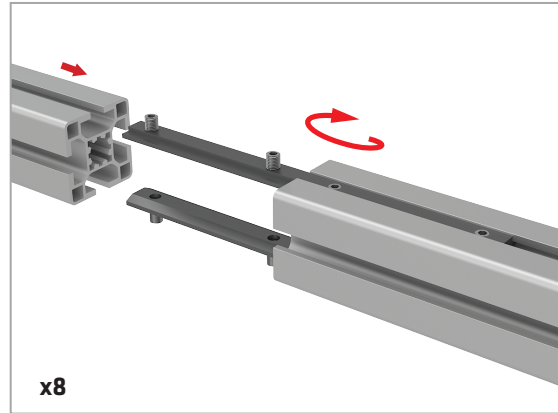

Step 3: Insert the round column nut into the hole at the bottom of the pole. Position the holes in the column nut to face up and down.

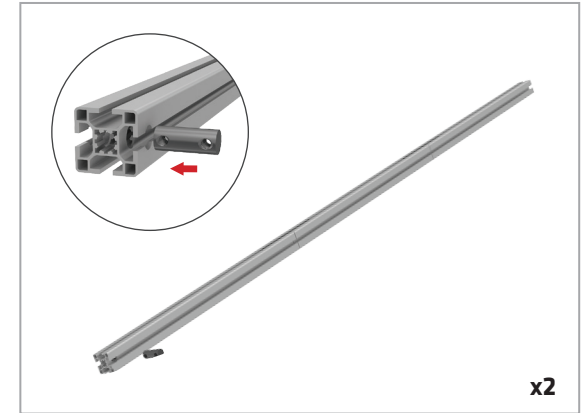


Step 4: Align the support poles with the holes in the base and insert screws through the bottom of the base. Tighten screws to secure.

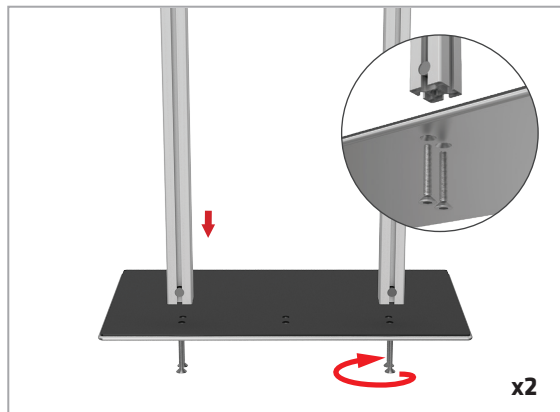

If you are installing the TV Stand behind a WaveLine Display with pass through holes already cut into the graphic, then skip to **Step 9**.



Step 5: To install the VESA Mount insert the screw through the hole and into the wedge. Place the wedge into the groove of the pole and rotate. Tighten screw.

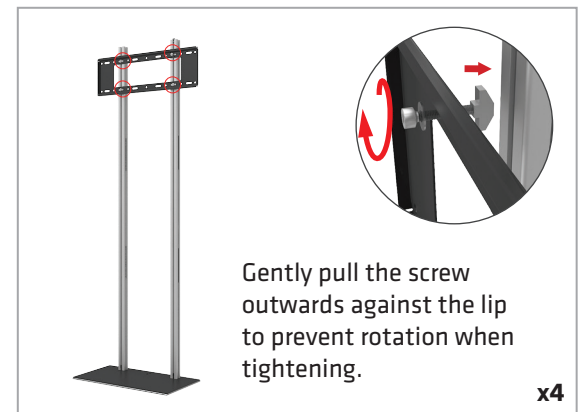

Set Up Instructions

WLMST-H-L


Step 6: Attach x2 - VESA Mounting Bars to the desired position on the back of the TV with x4 screws. Use the same position on each side of the TV for both mounting bars.



Step 7: Hinge TV with VESA Bars onto the VESA Mounting Plate until the TV hangs freely on its own.






Step 8: Secure the bars onto the mounting plate with x2 locking screws to keep TV from moving.

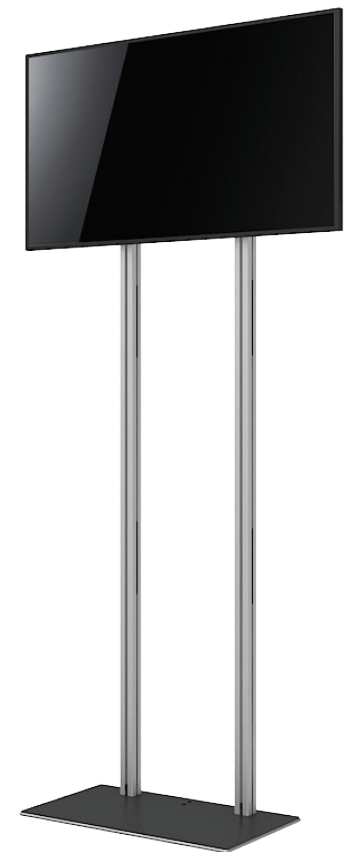

Set Up Instructions

CARDINAL

Final Assembly: Remove the single-post foot from the inside of each WaveLine 2000V panel. Replace one panel with a double-post foot and attach the two panels together at the foot. Secure the two panels together with butterfly clips and hex tool.

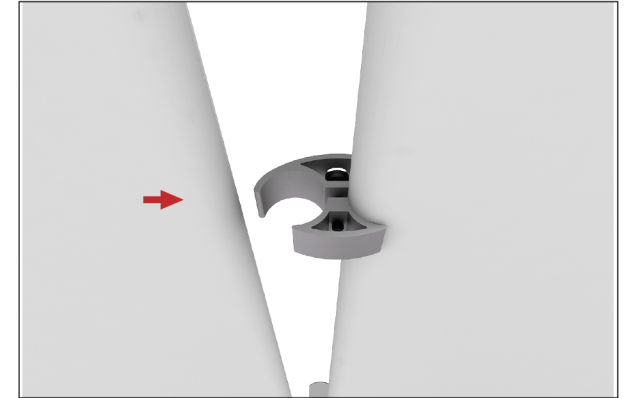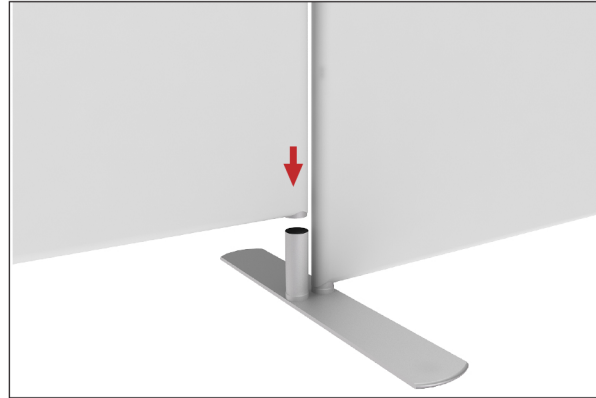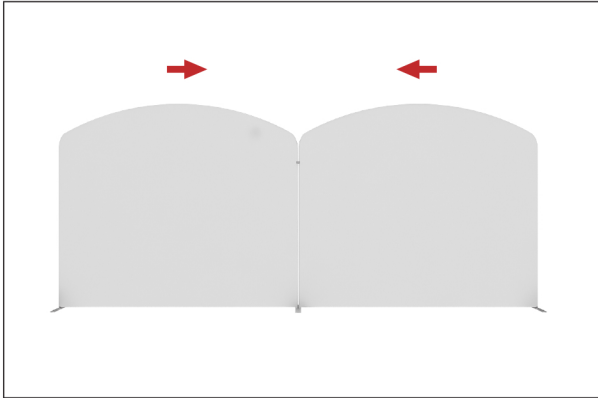

Move accessories into position to complete setup.

