



Set Up Instructions

WLM-2000J


Step 1: Assemble straight poles by pressing and pushing together.

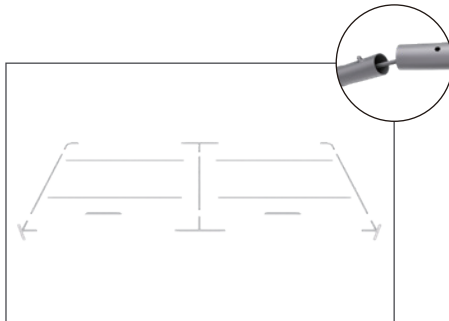


Step 2: Connect all corner sections to curved and straight sections of the frame by matching shape symbols on pipes.

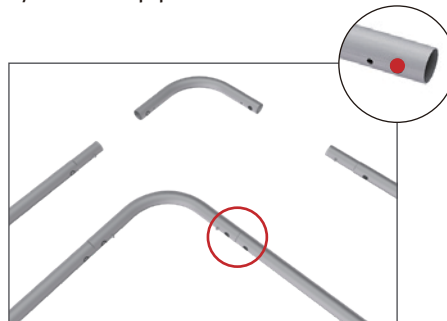


Step 3: Insert center support poles.

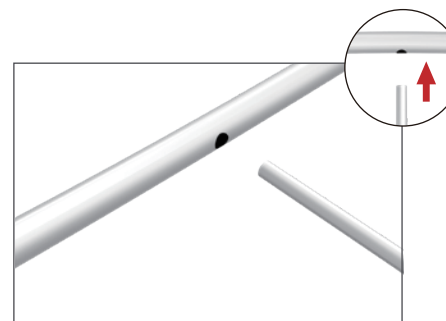


Step 4: Insert feet into base to complete assembled frame shown.

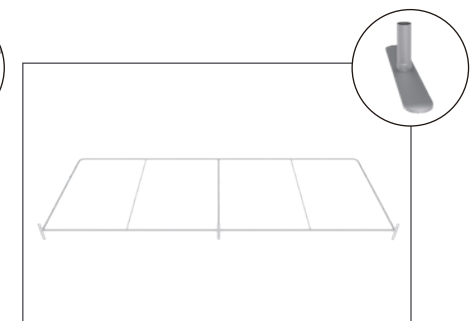

Step 5: Unzip print and lay image face up. Slide print onto frame like a pillow case.

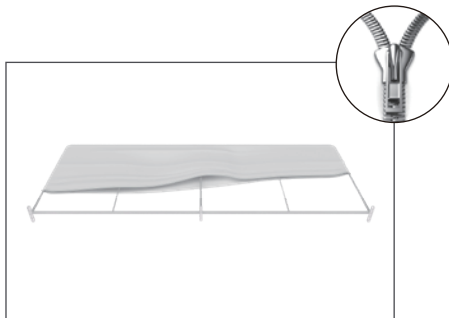

Step 6: Zip the edge of graphic beyond the center point as shown to hold the center pole in place. Zip the remaining side and bottom to meet at the corner.

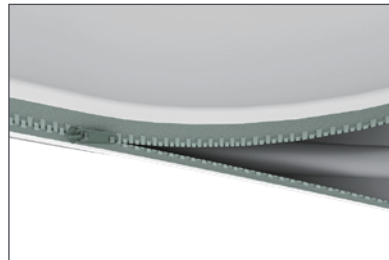

Step 7: Complete.




LIGHTS:
(OPTIONAL) Position as desired and tighten knob to hold in place.
WARNING! Over tightening may cause damage to fabric image.




Set Up Instructions

WLM-2700X900H


Step 1: Assemble straight poles by pressing and pushing together.

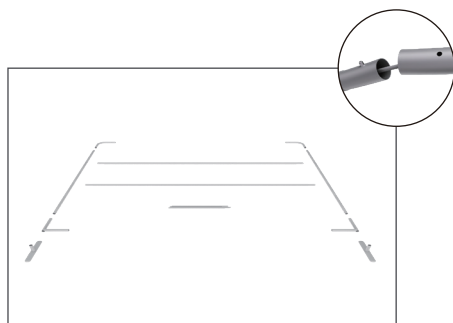


Step 2: Connect all corner sections to curved and straight sections of the frame by matching shape symbols on pipes.

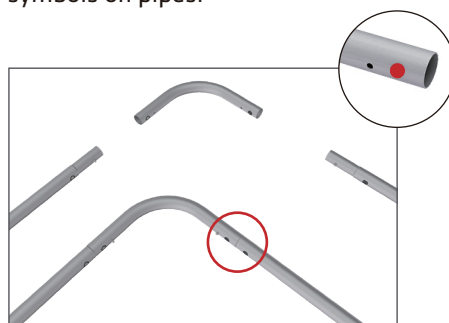


Step 3: Insert center support pole.

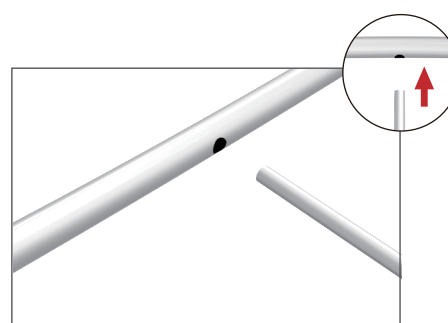


Step 4: Insert feet into base to complete assembled frame shown.

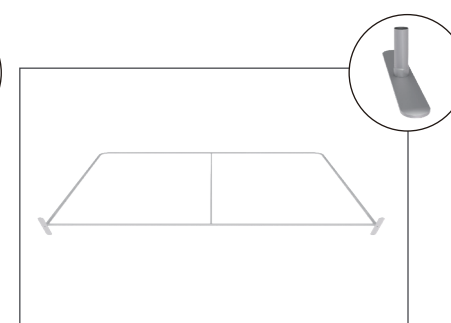

Step 5: Unzip print and lay image face up. Slide print onto frame like a pillow case.

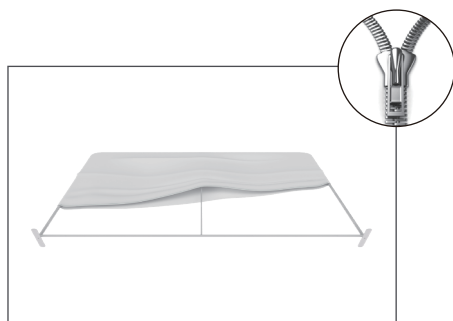

Step 6: Zip the edge of graphic beyond the center point as shown to hold the center pole in place. Zip the remaining side and bottom to meet at the corner.

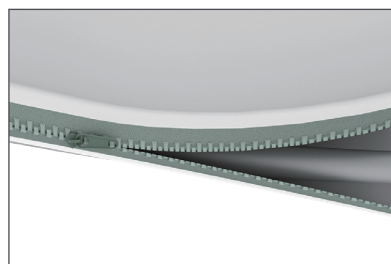

Step 7: Complete.




LIGHTS:
(OPTIONAL) Position as desired and tighten knob to hold in place.
WARNING! Over tightening may cause damage to fabric image.




Set Up Instructions

CSNRC-200M


Step 1: Assemble all straight pipes with bungee cords by pushing and pulling together.

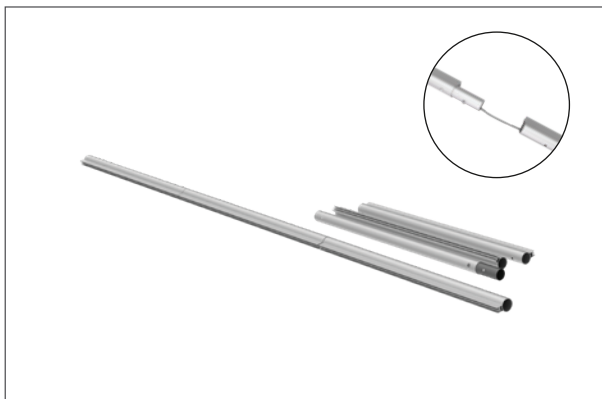


Step 2: Connect all corner sections to straight sections of the frame by matching color on pipes.

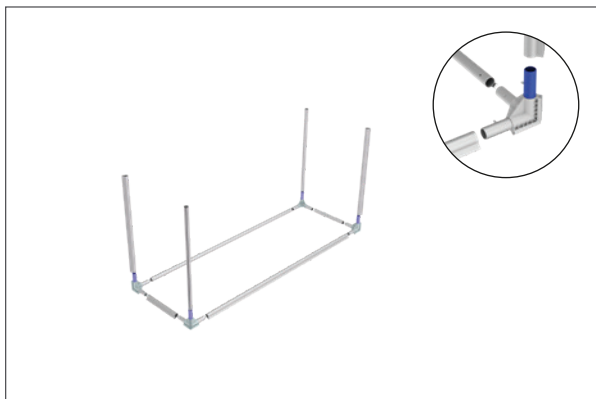



Step 3: Build two outer frames and connect top and bottom frames together in the corners with small connecting pipes.

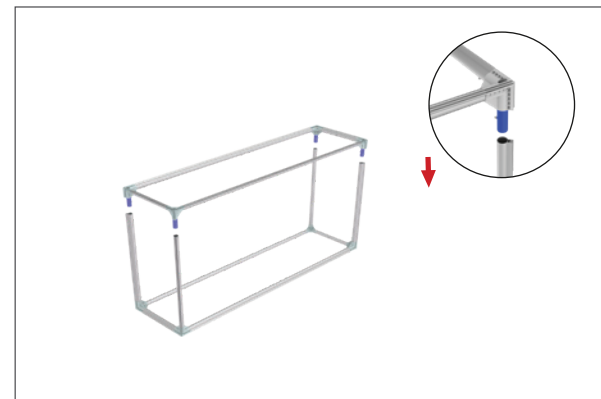

Step 4: At the top of the frame attach cable to left and right side. Tighten or loosen with hand pull.

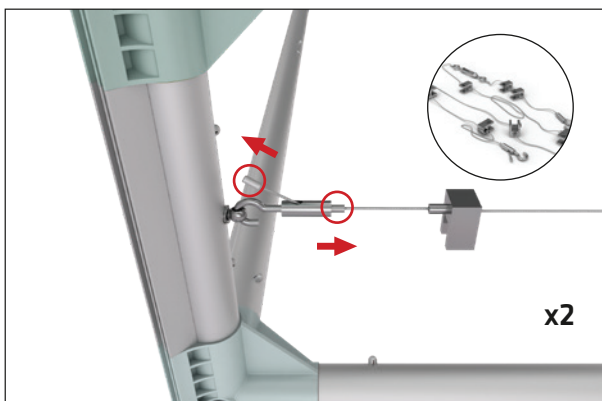

Step 5: Move to the center of cable and hand tighten remaining turn buckle to remove any remaining slack. Do not over tighten.

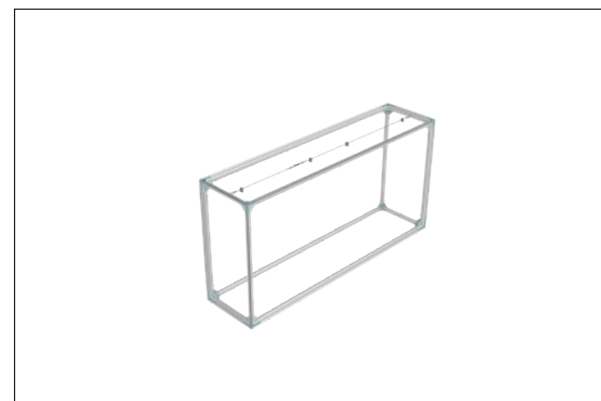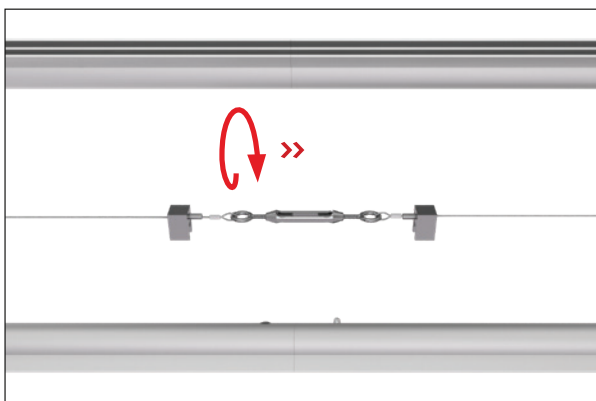



Set Up Instructions

CSNRC-200M

Step 6: Take out the LED Lights and hook the Light Array onto the wire harness clips at the top of frame

Repeat until all Light Arrays are attached. Lights Arrays do not attach to bottom of frame, but hang under their own weight in final upright position.

Step 7: Completed frame with Light Arrays attached.

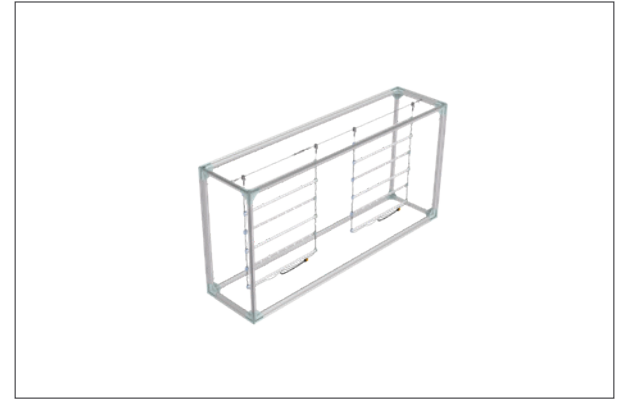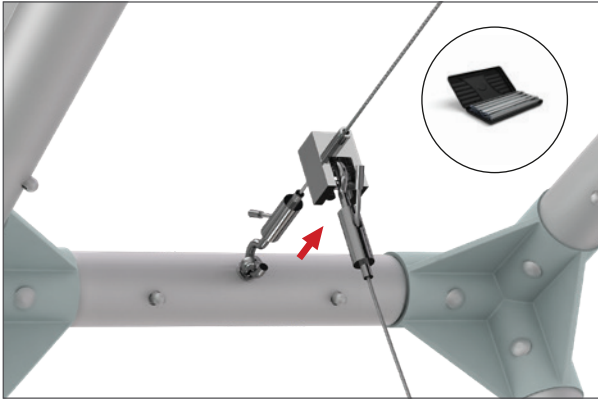

Step 8: Fit PVC inner boards onto the top of frame with wedge side face down. Position and align boards until they are all fitted down into the frame.

Step 9: Drape the graphic over frame and gently pull down to bottom of counter on all sides.

Step 10: To complete installation of graphic, gently place counter on its side.



Set Up Instructions

CSNRC-200M


Step 11: Start in one corner of the frame and push the silicone edge of graphic into the outside bottom groove. Insert for 4-6 inches in both directions. Repeat on all corners.




Step 12: Continue inserting silicone edge of graphic into the frame working towards the center of frame on each side. Do not over pull or stretch.




Step 13: Assemble tensioning pole.

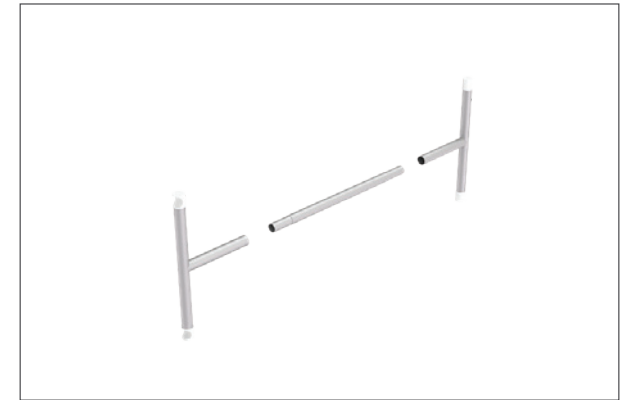

Step 14: Turn. Position. Lock. Insert tensioning pole into the bottom of display. Keep the pole flat until the entire pole fits inside the frame. **Turn** the pole 45°.

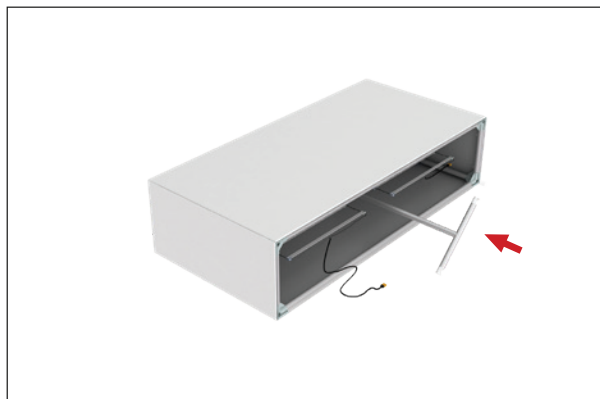

Position and push pole into the top of frame and rotate into position. **Lock** the bottom of the pole by firmly sliding or knocking the pole into place.

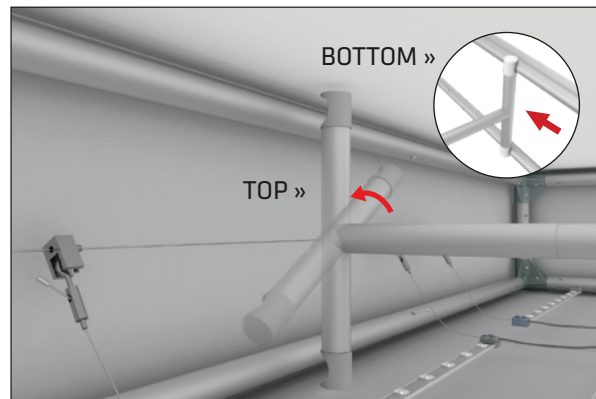


Step 15: Insert feet into 4 corners of the frame base.



Set Up Instructions

CSNRC-200M

Step 16: Attach upto x2 LED Light Arrays to one power supply. Stand counter into upright position over top of power supply with power cord showing.

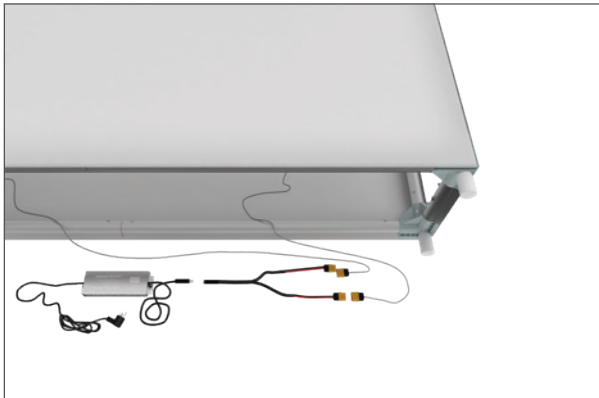

Step 17: Move counter into position and plug power cords into outlet to illuminate display.



CAUTION!

Do not connect lights to power when lights are rolled up. Hang lights on frame before connecting to power for testing.




Set Up Instructions

WLBS-36089FS


Step 1: Assemble straight poles by pressing and pushing together.




Step 2: Connect all corner sections to curved and straight sections of the frame by matching shape symbols on pipes.

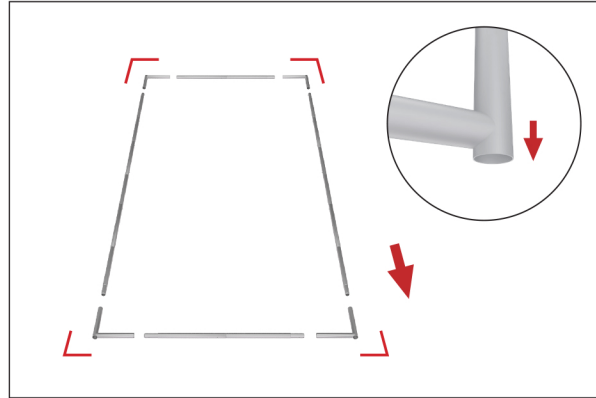


Step 3: Assemble post (75) into base plate or optional feet with screw by hand turning post and tightening into place.

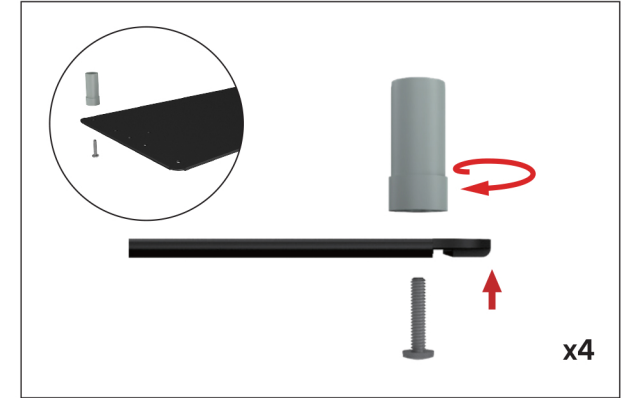


Step 4: Push banner stand frame onto posts of flat base or optional feet. Press evenly on both sides to make easier for the frame to go on.

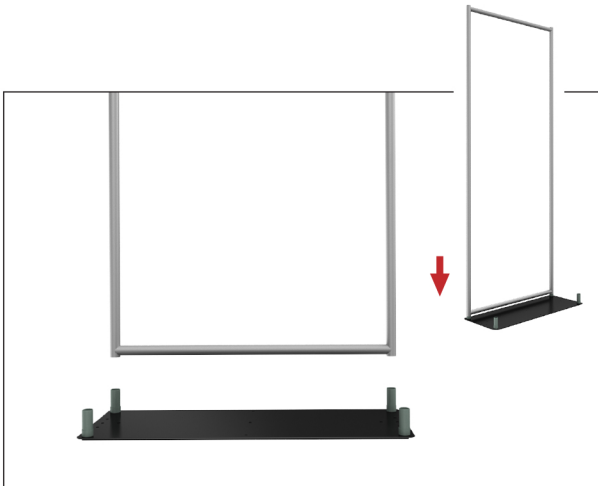

Step 5: Assemble front support poles with J-hook top corners.

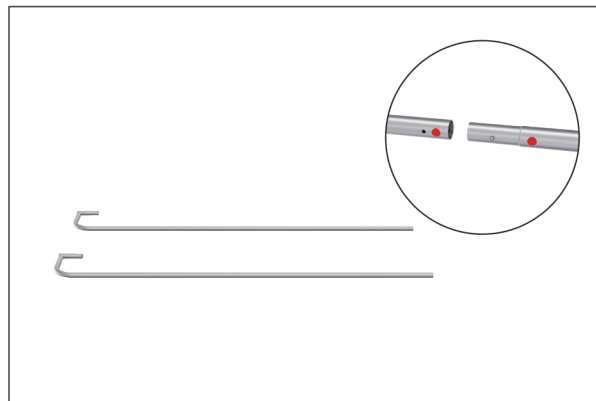

Step 6: Insert front support poles into the top of the frame and front posts.


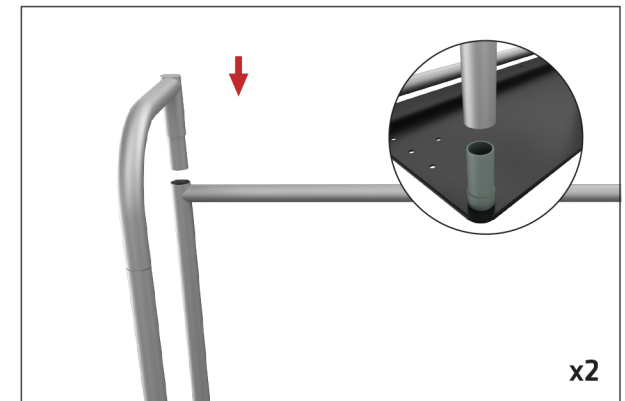


Set Up Instructions

WLBS-36089FS

Step 7: Unpack shelves and begin installation of the shelves on the frame.




SHELVING: Add shelves to frame. Position and level shelves on frame before tightening clamps down with hex tool.

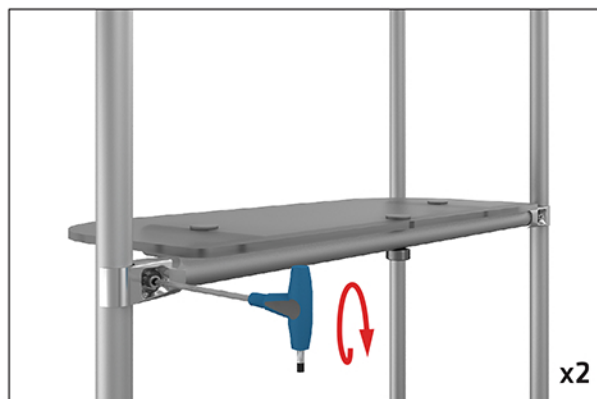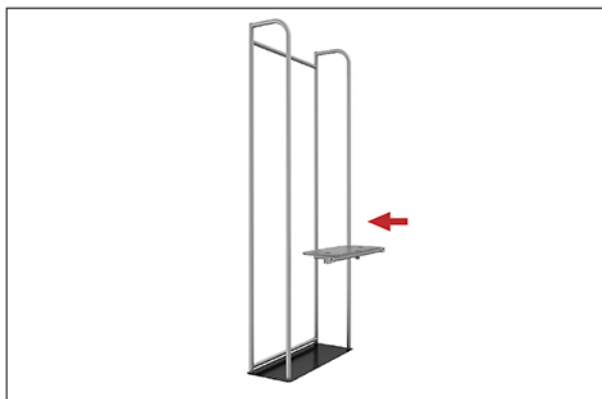

Set Up Instructions

KESTREL

Final Assembly: Remove the single-post feet from the outside corners of the center WaveLine 2000U panel and replace with double-post feet. Remove the inside single-post foot from each of the side panels and attach them to the center panel feet. Secure the side panels to the back panel with butterfly clips and hex tool.

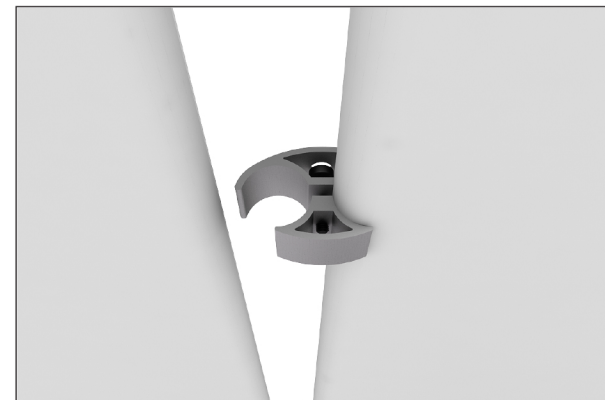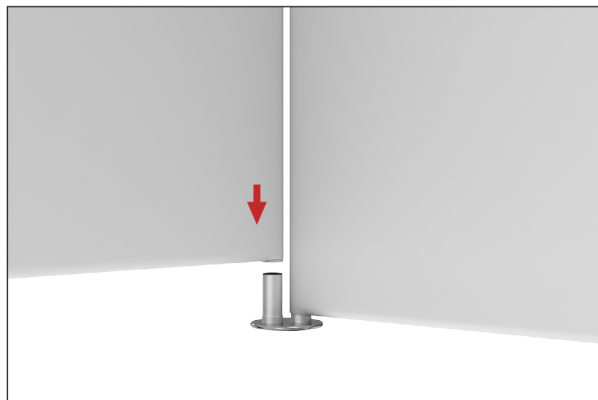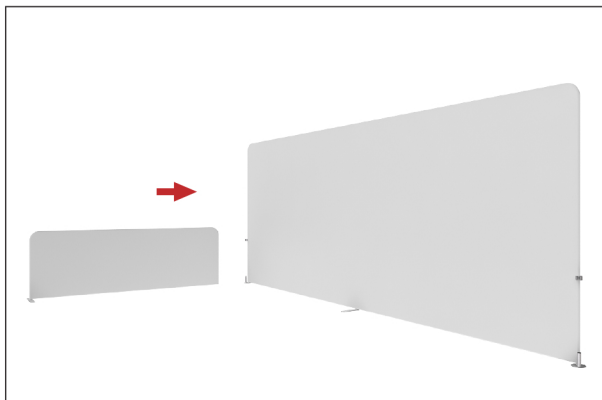

Repeat the steps above for each panel.

Move accessories into position to complete setup.

