



Set Up Instructions

WLM-2000W


Step 1: Assemble straight poles by pressing and pushing together.

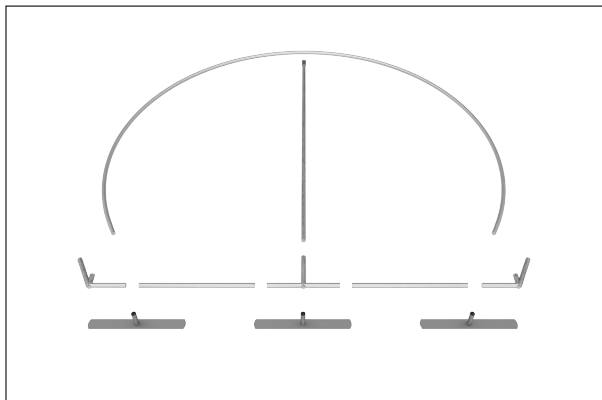


Step 2: Connect all corner sections to curved and straight sections of the frame by matching shape symbols on pipes.

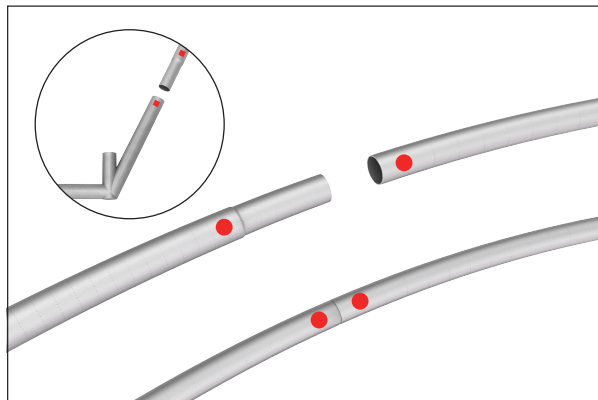



Step 3:

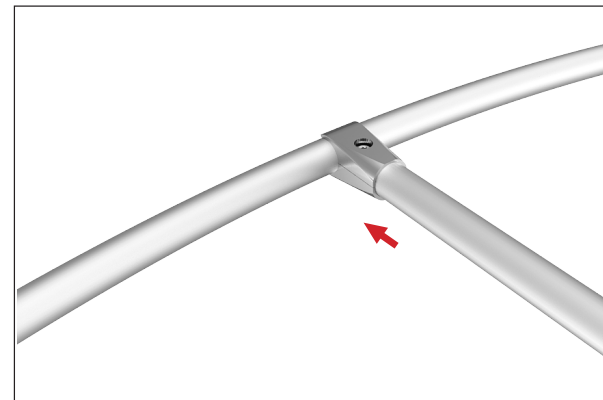

Step 4: Unzip print and lay image face up. Slide print onto frame like a pillow case. Pull and stretch the graphic below the bottom cross bar and zip closed under the cross bar.

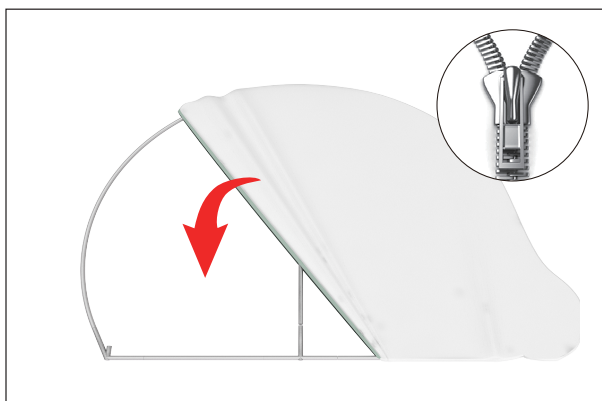


Step 5: Insert the feet that came with the display into the corners of base to complete assembled frame shown.

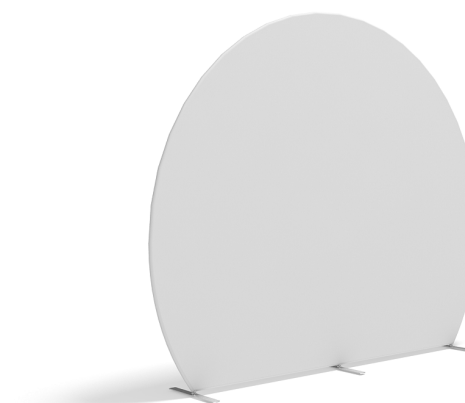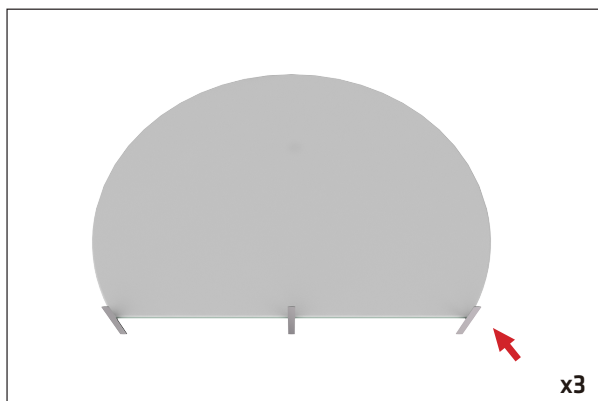


Set Up Instructions

WLM-2000A


Step 1: Assemble straight poles by pressing and pushing together.

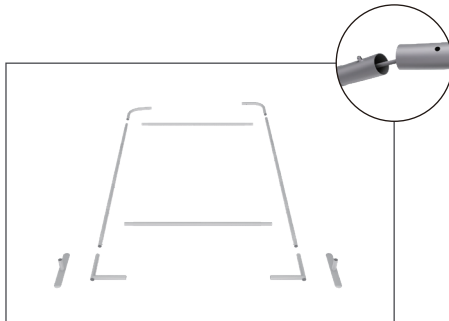


Step 2: Connect all corner sections to curved and straight sections of the frame by matching shape symbols on pipes.

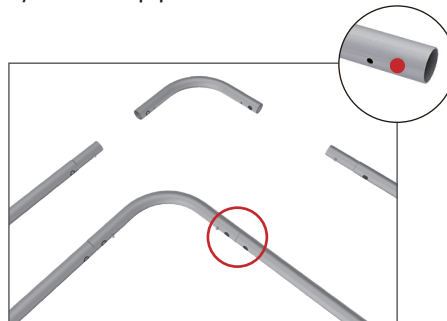


Step 3: Insert feet into base to complete assembled frame shown.

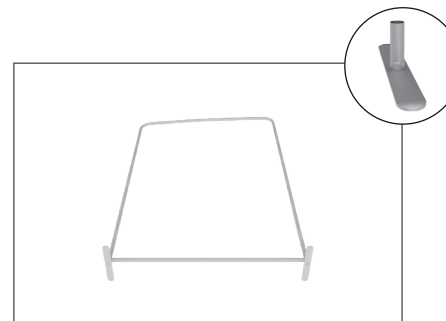

Step 4: Unzip print and lay image face up. Slide print onto frame like a pillow case.

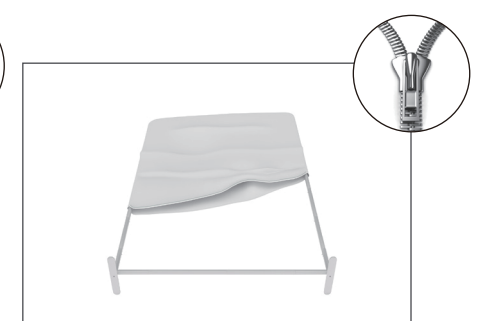

Step 5: Zip the edge of graphic beyond the center point as shown to hold the center pole in place. Zip the remaining side and bottom to meet at the corner.

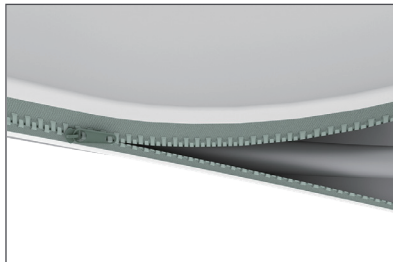

Step 6: Complete.



LIGHTS:
(OPTIONAL) Position as desired and tighten knob to hold in place.
WARNING! Over tightening may cause damage to fabric image.


Set Up Instructions

WLBS-36089FS


Step 1: Assemble straight poles by pressing and pushing together.




Step 2: Connect all corner sections to curved and straight sections of the frame by matching shape symbols on pipes.

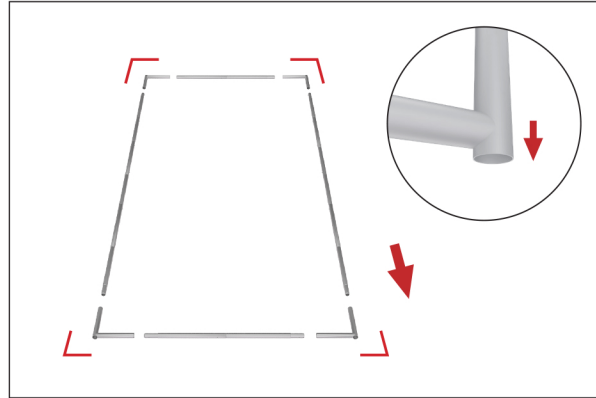


Step 3: Assemble post (75) into base plate or optional feet with screw by hand turning post and tightening into place.

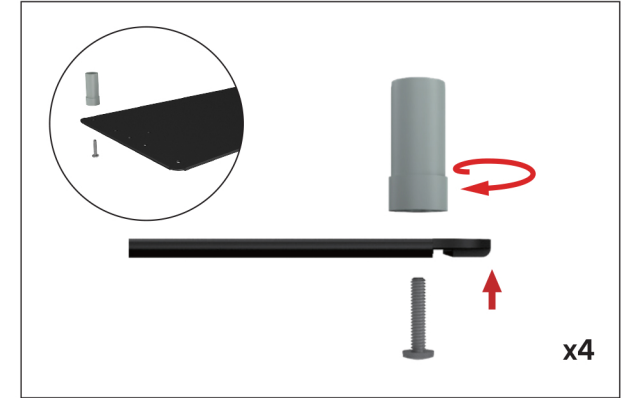


Step 4: Push banner stand frame onto posts of flat base or optional feet. Press evenly on both sides to make easier for the frame to go on.

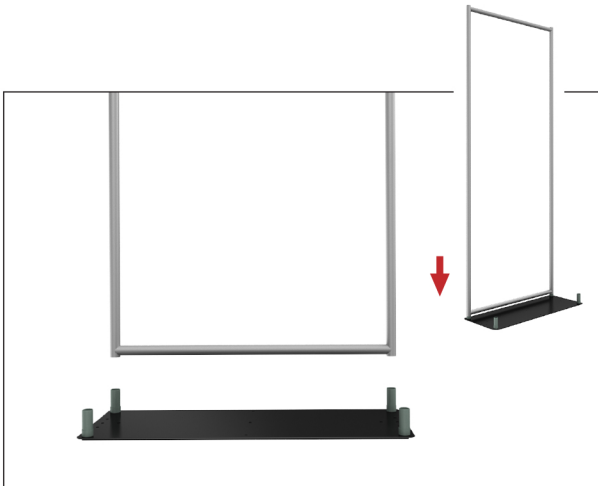

Step 5: Assemble front support poles with J-hook top corners.

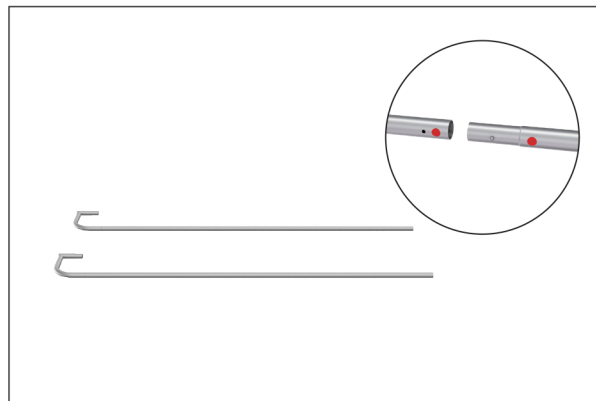

Step 6: Insert front support poles into the top of the frame and front posts.

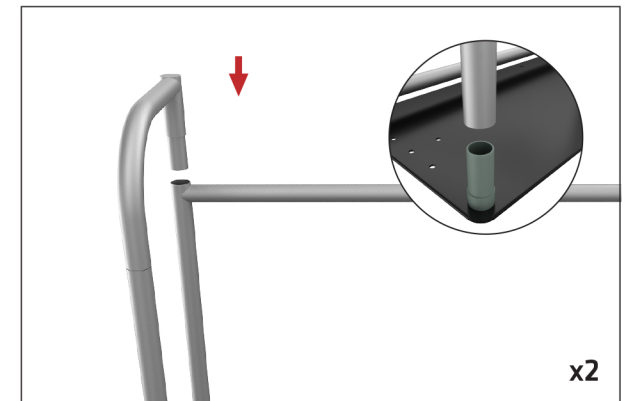


Set Up Instructions

WLBS-36089FS

Step 7: Unpack shelves and begin installation of the shelves on the frame.

SHELVING: Add shelves to frame. Position and level shelves on frame before tightening clamps down with hex tool.

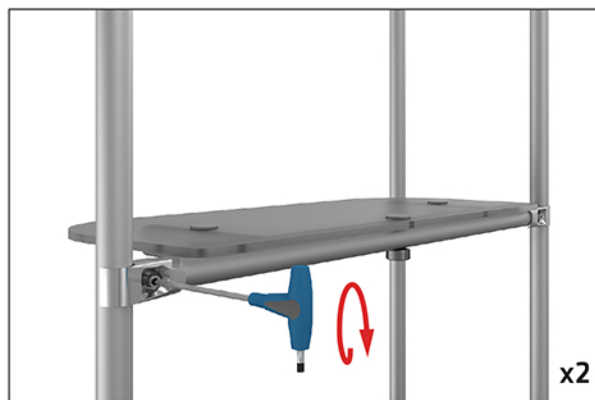


Set Up Instructions


WLMST-H-L

Step 1: Assemble the 3-piece support pole using x4 connecting bars with x8 screws by inserting the bars into the grooves and pushing the poles together.


Note: Placement of the flat bars below.

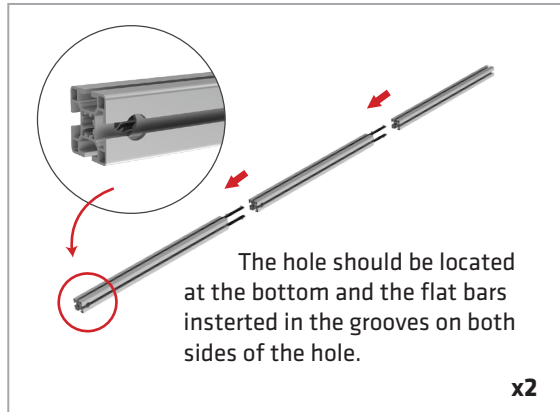


Step 2: Tighten the screws on the connector bars to secure the 3-piece support pole together.

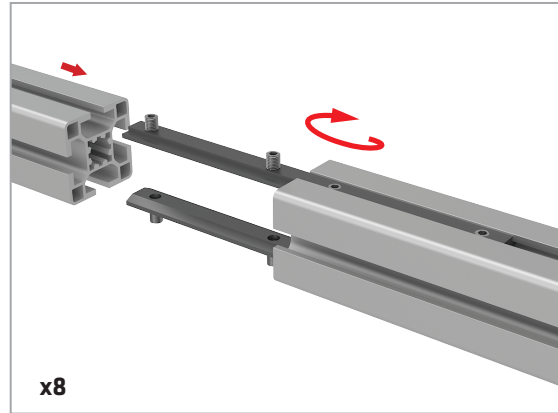

Step 3: Insert the round column nut into the hole at the bottom of the pole. Position the holes in the column nut to face up and down.

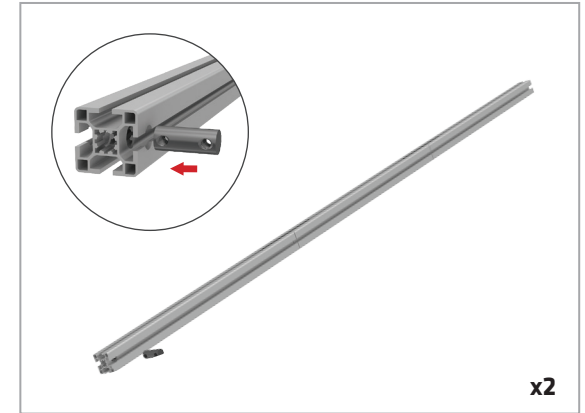


Step 4: Align the support poles with the holes in the base and insert screws through the bottom of the base. Tighten screws to secure.

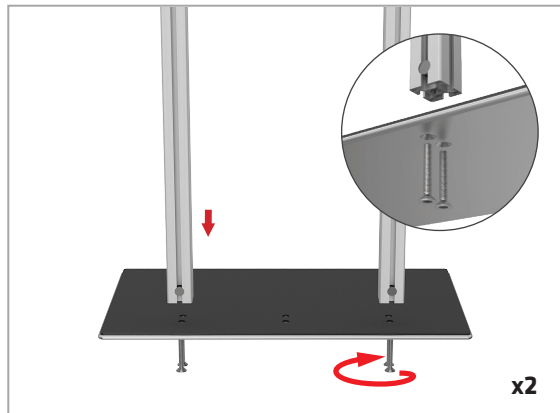

If you are installing the TV Stand behind a WaveLine Display with pass through holes already cut into the graphic, then skip to **Step 9**.



Step 5: To install the VESA Mount insert the screw through the hole and into the wedge. Place the wedge into the groove of the pole and rotate. Tighten screw.

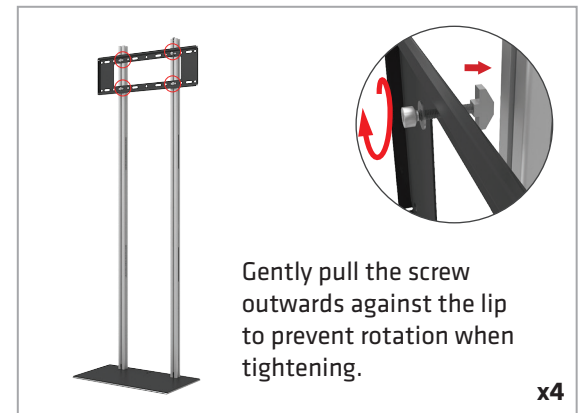

Set Up Instructions

WLMST-H-L


Step 6: Attach x2 - VESA Mounting Bars to the desired position on the back of the TV with x4 screws. Use the same position on each side of the TV for both mounting bars.



Step 7: Hinge TV with VESA Bars onto the VESA Mounting Plate until the TV hangs freely on its own.



Step 8: Secure the bars onto the mounting plate with x2 locking screws to keep TV from moving.

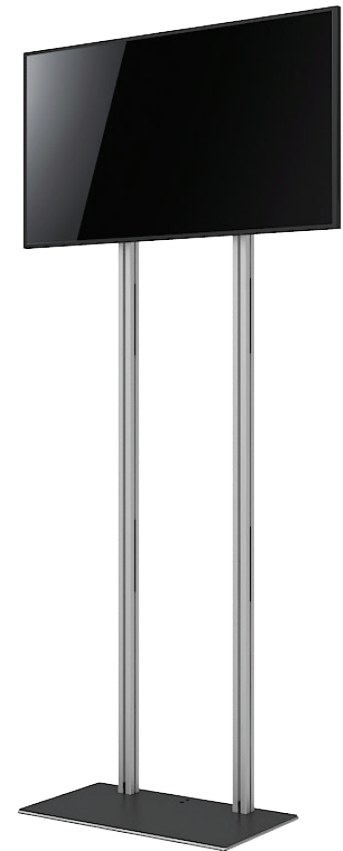

Set Up Instructions

CA700-CASE TO COUNTER


Step 1: Put case flat on the floor and undo straps. Lift lid and remove the contents of the case.




Step 2: Put the lid on the floor and screw the supplied vertical support poles into place.




Step 3: Put the base on the floor with wheels up and screw the supplied vertical support poles into place.

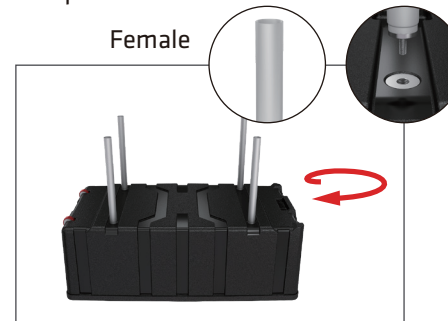


Step 4: Align support poles and fit the base to the lid. Press together firmly to secure. **OPTIONAL:** Install storage pocket onto lid first.

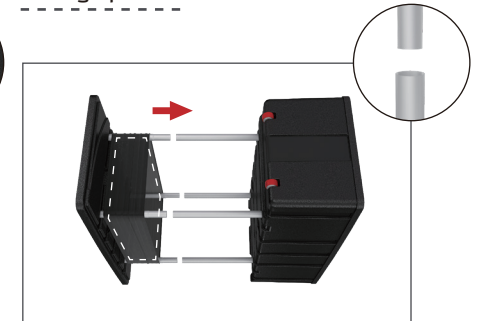

Step 5: Place case in a clean area upside down to place fabric print, over the case. **Start at the top with graphic up side down**, make sure zipper is in the middle.

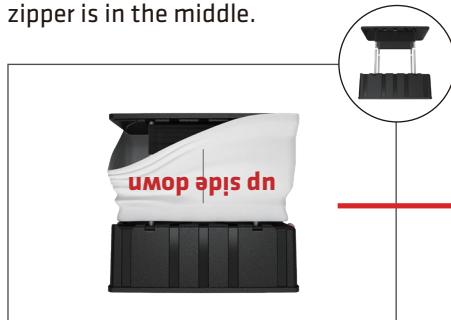

Pull the silicone grooved edge of graphic over the top of the lid and push onto the edge. Push the groove all the way around the case until secured without overstretching.

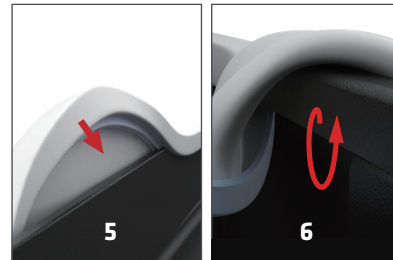

Step 6: Upright the case and pull edge of graphic over the top of the base and tuck under the lip into the groove of case. Follow all the way around the case until secured.





Step 7: Make sure that all wrinkles are out and the fabric looks straight. Press the counter top onto the case to secure.



Note: Do not overstretch silicone edge when installing graphic or you will end up with extra fabric that will not press on.

STORAGE:




The zipper on the back is used to access storage.

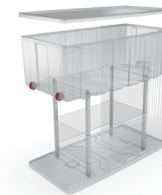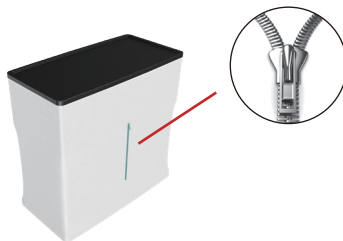

Set Up Instructions

OWL

Final Assembly: Remove the single-post feet from the two corners of the center WaveLine 2000W panel and replace with double-post feet. Remove the inside single-post foot from each of the outside Waveline 2000A panels and attach them to the center panel feet.

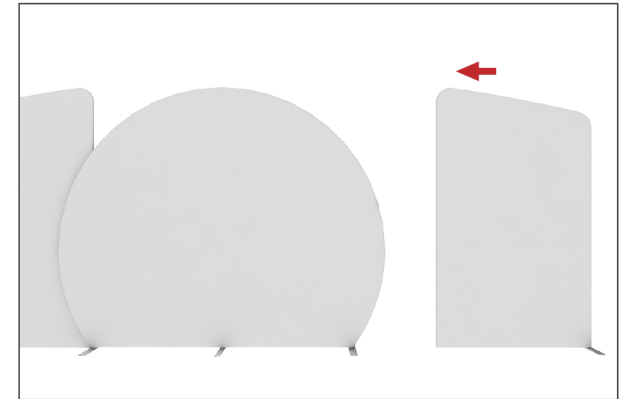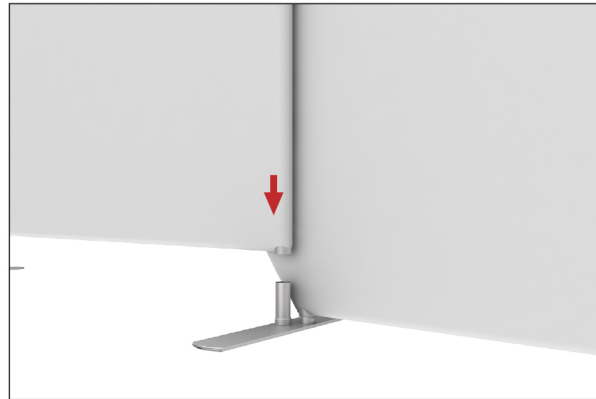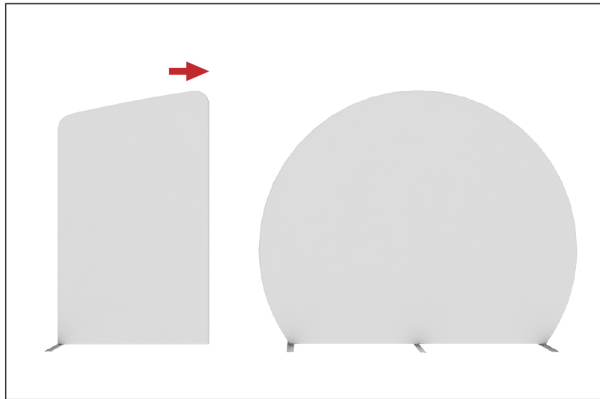

Move accessories into position to complete setup.

